



Peterson Party Center, Inc.
139 Swanton Street
Winchester, MA 01890
Tel: (781) 729-4000
Fax: (781) 729-4999
www.ppcinc.com

SNO-KONE INSTRUCTIONS

MAKE SNOW: Handling the machine with care, place the sno-kone machine on a flat and level surface. Start the motor and fill the gooseneck with ice cubes or block ice broken into pieces 3" to 4" in size. Fill the gooseneck about an inch or so from the top with ice. The larger the piece of ice, the better the snow. Push the "pusher" handle down to press the ice against the cutter head. A firm even pressure is all that is required, but sometimes you will find it better to relieve the pressure two or three times on the way down. This lets the ice rearrange itself and you get a better bite. Do not force the handle too much as the motor could be stalled. When too much pressure is necessary, relieve the handle and then come down again. Too much pressure on the pusher handle will make the ice come out coarse but too little pressure will make the ice come out mushy.

PREPARE SNOW: Once the ice is forced through the cutter head, snow will form in the machines container. After all the batch of ice is made into snow, turn the sno-kone machine off. Use a scoop to transfer snow into the appropriate container. Once the container is packed with snow, flavor the cone with the desired syrup(s).

CAUTION: KEEP HANDS AND FINGERS OUT OF GOOSENECK.

DO NOT APPLY PRESSURE ON HANDLE UNTIL MOTOR IS UP TO SPEED.

DO NOT PUT ANYTHING OTHER THAN ICE DOWN THE GOOSENECK. THIS WILL RUIN THE CUTTER BLADES.

IN NORMAL OPERATION THE MOTOR WILL BE WARM (A SURFACE TEMPERATURE OF 150°F IS NORMAL)

CAUTION: ADEQUATE EYE PROTECTION MUST BE USED WHEN SERVICING THIS EQUIPMENT TO PREVENT THE POSSIBILITY OF INJURY.