



Peterson Party Center, Inc.  
139 Swanton Street  
Winchester, MA 01890  
Tel: (781) 729-4000  
Fax: (781) 729-4999  
www.ppcinc.com

## COTTON CANDY INSTRUCTIONS

**SET UP MACHINE:** Place the cotton candy machine on a flat and level table. Place the large aluminum bowl on the machine base (The bowl sits on the machine without the use of fasteners). Attach the stabilizer with the clips provided to the inside of the bowl (this will allow the sugar to catch onto the mesh screen).

**PREPARE MACHINE FOR USE:** Make sure both switches on the front of the machine are in the OFF position. Plug in the machine. With the main switch OFF, fill the floss head with the floss sugar. Always fill the floss head 90% full. This quantity is necessary to obtain a balanced condition in the floss head. **DO NOT OVERFILL!** Excessive vibration will occur if overfilled. Before turning the power on, manually turn the head to balance out the sugar. This will also eliminate excessive vibration of the head.

***IMPORTANT: ALWAYS TURN MACHINE OFF WHEN ADDING FLOSS SUGAR.***

**MAKE COTTON CANDY:** Turn MAIN SWITCH and HEAT SWITCH ON. Turn heat control knob clockwise to maximum setting to initiate the fastest possible warm up. The machine should start making floss in a few seconds. When the unit starts making floss, you **MUST** reduce the heat setting. Turn the heat control knob counter clockwise to the marked operating position to eliminate smoking. If you operate the unit at START UP setting, you will carbonize the ribbon (heat element). Never operate equipment for a prolonged period of time with the HEAT CONTROL in a position that causes the sugar to smoke. If you smell burning sugar or see smoke, reduce the heat.

**COLLECTING COTTON CANDY:** Use floss cones to collect cotton candy from machine. Roll cone in the web of floss building up in the pan. Lift the cone out of pan with the ring of floss attached and rotate the cone to wrap the floss. **DO NOT** roll floss while the cone is inside the pan. This will pack the floss too tightly. If the floss fails to stick to the cone, pass the cone near the spinner head to pick up a "starter" strand.

***DO NOT PUT HANDS OR OBJECTS IN ROTATING SPINNER HEAD.***

***DO NOT FILL SPINNER HEAD WITH SUGAR WHILE IT IS ROTATING.***

***OPERATOR SHOULD WEAR EYE PROTECTION WHEN OPERATING.***