



Peterson Party Center, Inc.
139 Swanton Street
Winchester, MA 01890
Tel: (781) 729-4000
Fax: (781) 729-4999
www.ppcinc.com

CONVECTION OVEN INSTRUCTIONS

SETTING UP OVEN: Place the convection oven on a flat, level surface making sure there is a 4 inch clearance above the oven and 2 inch clearance from each side of the oven. Once the oven is in a secure location, plug in the power cord to the necessary outlet. When the oven is powered on, the clock will read "88:88." To set the clock press CLOCK and a beep will sound. Immediately press "+" and "-" until the display shows the correct time. Press CLOCK again once the correct time is displayed to set the clock. A beep will sound and the word SET will disappear from the display.

COOKING: Place baking pans / trays on racks leaving at least a half an inch of air space around all sides to allow the air to circulate freely. Once items are in place, close the oven door and set the temperature control knob to the desired temperature (Please see BAKING TIPS below for time and temperature settings). To begin cooking, press COOK/OFF. After the beep sounds, immediately press "+" until the digital display shows the amount of time you want the oven to be on. When you finish setting the time, a beep will sound and the oven automatically will turn on. Remember that no preheating is necessary. The power-on indicator light will illuminate and remain on until the oven goes off automatically when the cooking time is over. To stop cooking at any time press COOK/OFF.

BAKING TIPS

Position racks and trays to allow air to circulate freely in oven.

No preheating is necessary for baking

Adjust baking temperatures when using your recipes

(For receipts with leavening agents, decrease the recipe temperature by 75°F but not lower than 275°F)

Check oven 5-10 minutes before end of suggested baking time. Continue baking if necessary.