



Peterson Party Center, Inc.  
139 Swanton Street  
Winchester, MA 01890  
Tel: (781) 729-4000  
Fax: (781) 729-4999  
www.ppcinc.com

## H.D. CONVECTION OVEN INSTRUCTIONS

**PREHEAT OVEN:** Place the convection oven on a flat, level surface and plug the cord into the necessary receptacle. Once the oven is properly powered, turn the timer knob to the maximum setting (120 minutes) and select the desired temperature by rotating the knob clockwise to the desired temperature setting. The unit will preheat in seven minutes or less, depending on the temperature setting. The green indicator light indicates that the timer is set. The red indicator light indicates that the thermostat is operating and will turn off when the desired temperature is reached. The heating elements and fan will operate only when the timer and thermostat are set.

**COOKING:** Prior to cooking, the oven should be preheated. To cook an item for a specific length of time, with the oven preheated, select the desired temperature and set the timer for the appropriate amount of time. The elements and fan will turn off when time is elapsed. Remove the product from the oven carefully as it will most likely be hot. Close the oven door to retain heat if continued use is desired and reset the timer to keep the unit on.

---

***Please be aware that the unit will be hot when heating elements are on.***

***Do not allow cord to touch hot surfaces.***